



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY DFS-500 VIDEO SWITCHER. You'll find the answers to all your questions on the SONY DFS-500 VIDEO SWITCHER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY DFS-500 VIDEO SWITCHER
User guide SONY DFS-500 VIDEO SWITCHER
Operating instructions SONY DFS-500 VIDEO SWITCHER
Instructions for use SONY DFS-500 VIDEO SWITCHER
Instruction manual SONY DFS-500 VIDEO SWITCHER

SONY

3-243-381-11 (1)

TV/WB/FM/AM Portable CD Player

Operating Instructions

About the area code

The area code of the location in which you purchased the CD player is shown on upper left of the bar code label on the package.
For accessories supplied with your CD player, check the area code of your model and see "Accessories (supplied/optional)."



"WALKMAN" is a trademark of Sony Corporation.

D-FS601

—
© 2002 Sony Corporation



[Your user manual](#)
[SONY DFS-500 VIDEO SWITCHER](#)
<http://mypdfmanuals.com/dref/526256>

Manual abstract:

" About CD-Rs/CD-RWs This CD player can play CD-Rs/CD-RWs recorded in the CD-DA format*, but playback capability may vary depending on the quality of the disc and the condition of the recording device. * CD-DA is the abbreviation for Compact Disc Digital Audio. It is a recording standard used for the Audio CDs. Removing the CD Remove the CD while pressing the pivot in the center of the tray. 8 Playback options You can enjoy various ways of playback using PLAY MODE and REPEAT/ENTER. PLAY MODE button Each time you press the button, you can change the playback mode. No indication (Normal play) "I" (Play a single track) Playback options REPEAT/ENTER button "SHUF" (Play tracks in random order) "PGM" (Play tracks in your favorite order) REPEAT You can repeat play that is selected using PLAY MODE. ENTER You can select tracks for PGM play mode. 3-way control key (N/J, .)

(Continued) 9 Playing tracks repeatedly During playback, press REPEAT/ENTER.

(Repeat play) You can play tracks repeatedly in normal, single, shuffle and PGM play modes. Playing a single track During playback, press PLAY MODE repeatedly until "I" appears. (Single play) Playing tracks in random order During playback, press PLAY MODE repeatedly until "SHUF" appears. (Shuffle play) 10 Playing tracks in your favorite order (PGM play) You can program the CD player to play up to 64 tracks in your favorite order. 1 During playback, press PLAY MODE repeatedly until "PGM" appears.

2 Push the 3-way control key toward . or N/J to select a track. Track number Playing order Playback options 3 Press REPEAT/ENTER to enter the selected track. "00" appears and the playing order increases by one. 4 5 Repeat steps 2 and 3 to select the tracks in your favorite order.

Hold down REPEAT/ENTER to start PGM play. To check the program During programming: Press REPEAT/ENTER repeatedly before step 5. During the PGM play: Press PLAY MODE repeatedly until "PGM" flashes, then press REPEAT/ENTER. Each time you press REPEAT/ENTER, the track number appears. Notes · When you finish entering the 64th track in step 3, the first selected track appears in the display. · If you select more than 64 tracks, the first selected tracks are erased. 11 Using the radio Once you've stored your favorite stations, you can easily tune in the station with any band and frequency setting by pressing one of the 1 - 3 buttons. Listening to the radio You can enjoy TV, WB (weather band), FM and AM programs. 1 2 Press TV, WB, FM or AM to select the band (direct power-on). Press TUNING + or to tune in the station you want and adjust the volume.

To turn off the radio Press x-RADIO OFF/CHG. To tune in the station quickly Hold down TUNING + or in step 2 until the frequency digits begin to change in the display. The CD player automatically scans the radio frequencies and stops when it finds a clear station. 12 To improve broadcast reception For TV/WB/FM, extend the headphones/earphones cord.

Headphones or Earphones For AM, reorient the CD player itself. Note Keep the headphones/earphones connected to the i jack of the CD player. The headphones/earphones cord works as the TV/WB/FM antenna. Using the radio If it is hard to hear the FM broadcast Set the LOCAL/DX switch to "LOCAL" using a pointed material. Under the normal conditions, set to "DX." When listening to the radio on batteries If you connect the external power source plug to the DC IN 4.

5 V jack of your CD player, the CD player will turn off. Turn it on by pressing TV, WB, FM or AM to continue listening to it. 13 Presetting your favorite radio stations You can store your favorite radio stations into the CD player's memory. You can store up to 3 stations with any band and frequency setting. 1 2 Tune in the station you want.

Hold down one of the 1 - 3 buttons that you want to store the new station on for 2 seconds or more. When the station is preset successfully, the beep sounds and the indication "F1," "F2" or "F3" appears in the display. The new station replaces the old one. Example: TV: WB (weather band): FM: AM: To play your favorite stations Press one of the 1 - 3 buttons..



[Your user manual](#)

[SONY DFS-500 VIDEO SWITCHER](#)

<http://mypdfmanuals.com/dref/526256>